

5.25" LEFT CENTER, RIGHT in Wall Speaker HD525.1LCR

Woofer: Dual 5.25" woven Kevlar cone, rubber surround, 22 oz Magnet, 1" voice coil, bumped back plate

Midrange: 3" woven Kevlar cone, rubber surround

Tweeter: 1" Titanium dome tweeter, Ferro-fluid cooled, Neodymium magnet, Swivel 30 degrees, wide dispersion

Crossover: 12dB on woofer section, 18 dB on midrange section, and 12dB on one tweeter section, and 24 dB on the other tweeter

▲ Polyimide auto protective reset switch for the system

▲ Gold plated terminal posts will accept 14AWG wire

Punch out in baffle for infrared sensor control

Video shielded for safe placement near TV without interference

Bass and Treble switches: +3/0/-3dB On woofers, midrange and tweeters

Overall Frequency Response: 40Hz - 26,500Hz (+ - 9dB)

Lower Frequency Limit: 60Hz (-3dB)

Upper Frequency Limit: 25,000Hz (-3dB)

Sensitivity: 89dB

Maximum Thermal Rating: 150 watts

Impedance: 4/8 ohm selectable

Cut out size: 12.99"X8.97"

Weight (single pack): 5.2 LBS

Dimensions (single pack): 15.94" (H) X12.99" (W) X6.29" (L)

SHIPPED WITH GRILLES,CUTOUT TEMPLATES



InwallTech

HD525.1LCR

5.25" LEFT CENTER, RIGHT in Wall Speaker

NEW TRIMLESS DESIGN



INWALL AUDIO/VIDEO AND NETWORKING, INC.

Lifetime Warranty

INWALL AUDIO/VIDEO AND NETWORKING, INC. will repair or replace any defect in material or workmanship which occurs during normal use of this product with new or rebuilt parts, free of charge, for 5 years from the date of original purchase. This is a no hassle warranty with no mail in warranty card needed. This warranty does not cover damages in shipment, failures caused by other products not supplied by **INWALL AUDIO/VIDEO AND NETWORKING, INC.** or failures due to accident, misuse, abuse, or alteration of the equipment. This warranty is extended only to the original purchaser, and a purchase receipt, invoice, or other proof of original purchase date will be required before warranty repairs are provided.

This warranty gives you specific legal rights and you may have other rights (which vary from state to state). If a problem with this product develops during or after the warranty period, please contact **INWALL AUDIO/VIDEO AND NETWORKING, INC.**, or an authorized dealer. Any unauthorized repairs will void this warranty.

Inwall Audio/Video and Networking, Inc.

19363 Willamette Dr. #160

West Linn, OR 97068

800-786-3197

Description:

InwallTech full range of stereo custom installation Loud-speakers have been designed for easy In-Wall or Ceiling mounting. Please read the instructions thoroughly before beginning, then select the proper hook-up configuration and follow the step-by-step instructions for a successful installation and years of listening pleasure.

Mounting Considerations:

Caution: When choosing a location for mounting the Speakers, make certain the wall or ceiling material is sturdy enough to support the weight of the speakers.

Decide where the Speakers will be mounted. Be careful not to mount them over a stud or any other obstruction and at least 1" from the stud. Be certain you can run the Speaker wire to the point where the speaker will be mounted.

InwallTech recommends 16 gauge speaker wire for distances up to 100 feet. For lengths up to 150 feet use 14 gauge speaker wire. Lengths over 150 are not recommended.

Mounting Instructions:

1. Using the template as a guide (Inside Speaker box) carefully cut a hole in the wall or ceiling. Find the Speaker wire leads and pull them through.

2. Just simply remove the grille towards you.

3. Hook-up the pre-wired Speaker leads to the input terminals as necessary.

Note: Be sure to observe proper polarity when connecting the Speaker wire to the Speaker.

Red= Positive(+)

Black= Negative(-)

4. Place the Speaker in the cutout.

5. To install the Speaker rotate the (6) locking clamps counterclockwise so that they sit flush against the side of the Speaker to release the locking clamps.

6. Insert the Speakers into the cutout and tighten the clamps clockwise until they firmly clamp the Speaker to the mounting surface.

Note: Do not over tighten the screws.

7. Position the Grille on the baffle until you feel it is securely in position.

8. The Speaker system is now ready to be turned on.

9. For removal of the custom installation Speaker, remove the grille. Turn the (6) locking screws counterclockwise until they release from the wall or ceiling. Pull the system out and disconnect the Speaker wires.